
Installation Manual




Standard Integrated pressurized

1, Installation of whole set

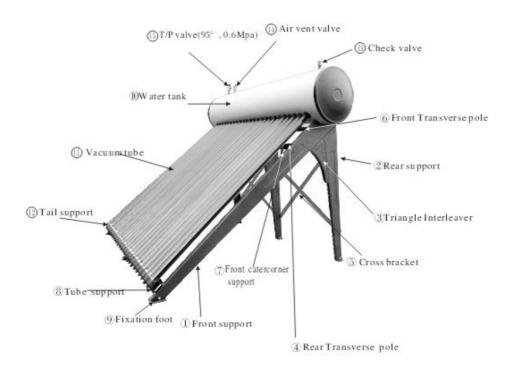



2 Main components

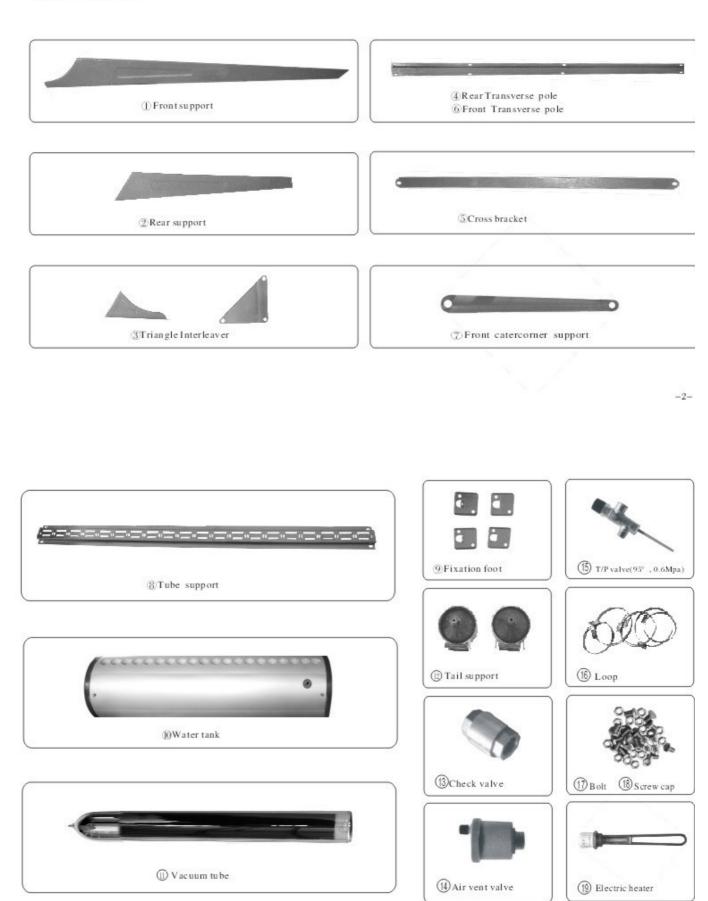


- 3. Link front support with rear support
 Use (17) M8 bolts, (18) M8 screw caps to connect
 (1) front support with (2) rear support.
 Then instal (3) triangle interleaver.
- 4. Assemble the other side in same procedure


 The whole set frame can stand like below picture

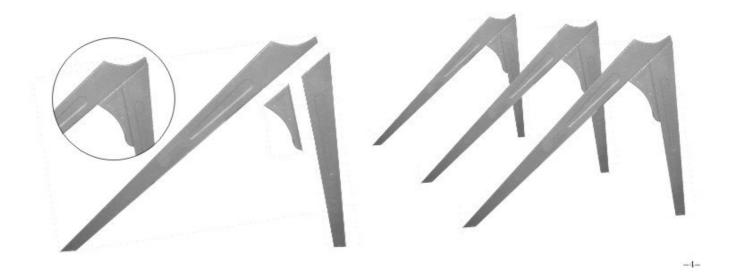

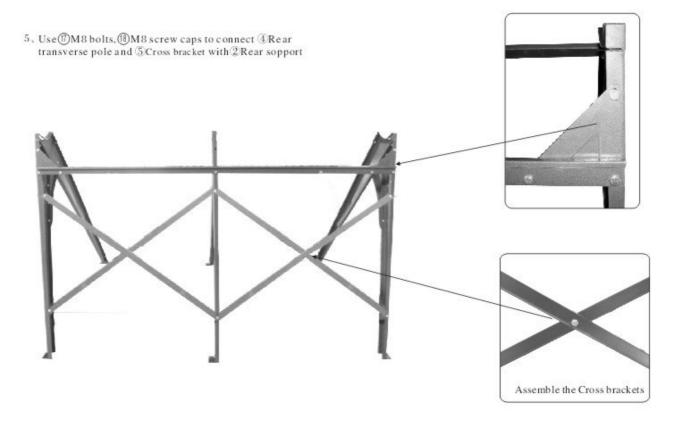

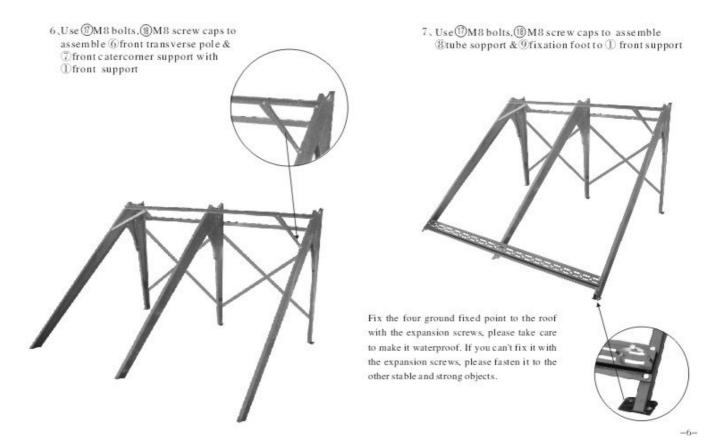

8. Link Water tank with frame

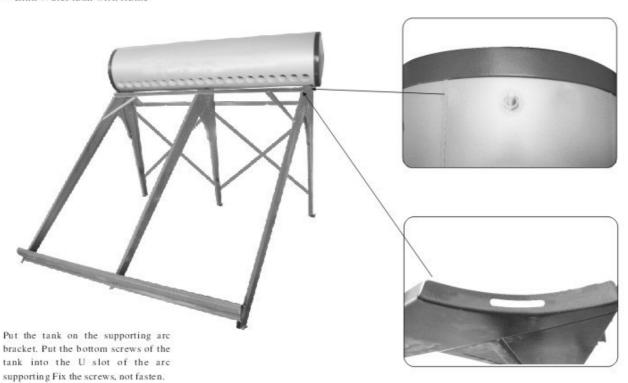



10 Assemble (I) vacuum tube with (I) water tank





-8-


Firstly, lubricate the tube by daubing 10 to 15cm of the outer of the tube with the soap or wash power solution. Then cover it with the anti-wind circles. Then, put the mouth of the (1) glass vacuum tubes up and let it 45° to the ground, turning the tube and put tube to the silicon rubber circle of the tank, then turn the bottom of the glass vacuum tube down to the plastic supporting circle of the 12 Tail support carefully to make it be support by the caudal box.

At last, install the other (1) vacuum tubes one by one.

Check it after installing.check whether all parts are fitfully, if so, fasten all of the screws and check the valve, Connector, connecting of the glass vacuum heat tubes to see if there is a leak.

11 . Assemble the loop

Insert the fb loop into the tube support , and fix the loop \$ with screwdriver

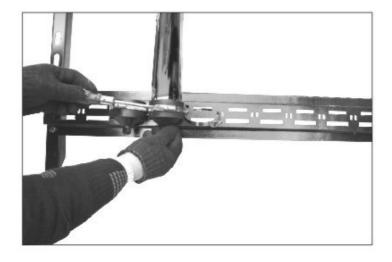



12. Fix the tail support

-10-

13、Integrated Pressurized Solar Installation Sketch Map

